

AMIKO®

EN

 
 
T765

Quick Start Guide

www.amikostb.com




PACKAGE

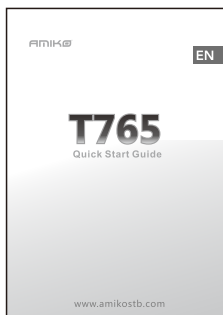





INSTALLATION

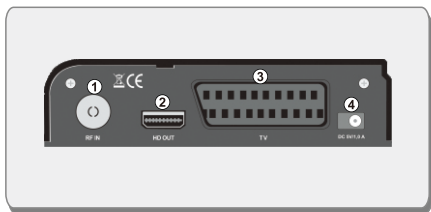 


1

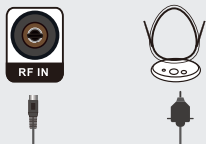 


2

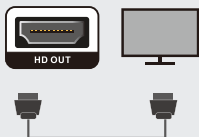 


3

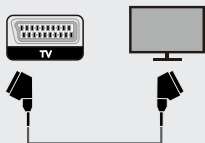 

4

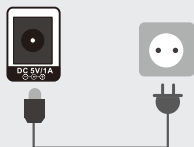 


5

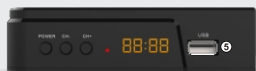 

REMOTE CONTROL DESCRIPTION



POWER  :To switch your receiver to standby mode or switch it on from standby.

MUTE  :Used to enable or disable the audio.

TV / RADIO: Receiver switches between TV and Radio mode.

RECALL: Return to the previous menu or status.

TV/STB: Receiver switches between TV and receiver mode.



INFO: To display channel status or various program information of current service.



EPG(Electronic Program Guide):Display the Programs guide on screen when available.

MENU:Displays the Main Menu on the screen,or return to the previous menu or status.

EXIT:Cancel the user selection and return to the viewing mode from a menu.

OK:To select menu option or confirm entry.

KEY   :To adjust volume level, or to move cursor left or right in the menu.

KEY   :To change channels, or to move cursor up or down in the menu.

PAGE+ /PAGE-: To move up the cursor to the next or previous page in the menu or channel list.

REC  :Record program to local storage such as USB stick.

Teletext (Green key) :Shows teletext information of the current channel


Subtitle (Yellow key) :Subtitle Display.

FIND  :Use to prompt find channels sort by character.


TIMER:Press timer key you can setup up the Standby time.

V.FORMAT: Press this button to switch between different resolutions (display modes).

FAV(FAVORITE):To set receiver to the favorite server mode, display the favorite channel.



FOLDER  :Press this button to enter the Record Manager menu directly.

AUDIO(Red Key):Audio channels setup, to select audio mode; Left, Right , Stereo, Mono.

USB  :To remove the USB Hard Disk safely.

Play  :To play or pause the MP3, JPEP or Record files.

 
Stop  :To stop the Time Shift, recording, or MP3/JPEG player.

PREV/NEXT   :Switch to jump to previous or next file in play mode.

FIRST TIME INSTALLATION


In “System” menu:

- Press ◀ ▶ key to select menu items among Language, AV Setting, Ethernet Setting, Time Setting, Timer, Parental Control, Miscellaneous settings, Software Upgrade, Default Setting, Import E2 database, and Information.
- Press [OK] key to enter the selected item.

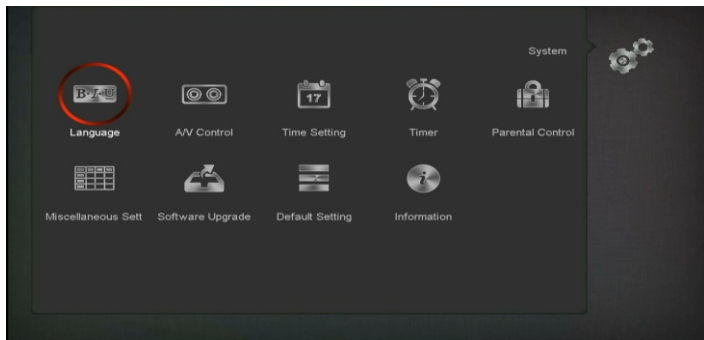

Language selection:

 - Use button ◀ ▶ key to select the desired language and confirm with [OK] button.

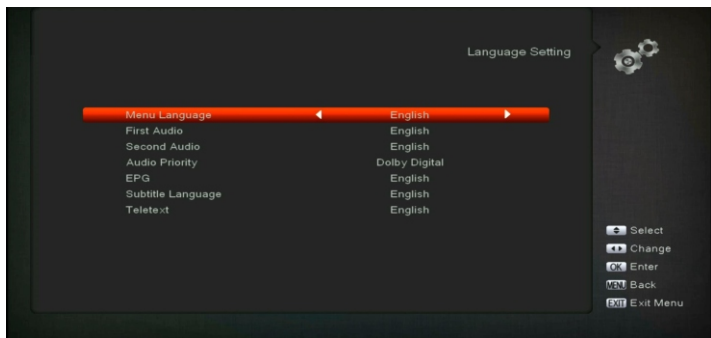

Time setting:

- You can set the time MODE AUTO/Manual, when you want to set time manual, in this case, you need to enter correct time in date and time field with 0~9 button.
- Select the correct summertime according to your time zone.



 
AV Setting:

- Here you need to select the desired resolution depending on your HD TV set and confirm with OK button.




Installation:

1. Press [OK] key to enter the "Installation". If Menu Lock is "On", it will display a dialogue for user to enter in password. The default Password is "0000".
2. Press [Up/ down] key to select menu items. Press [menu] key to go back to main menu.

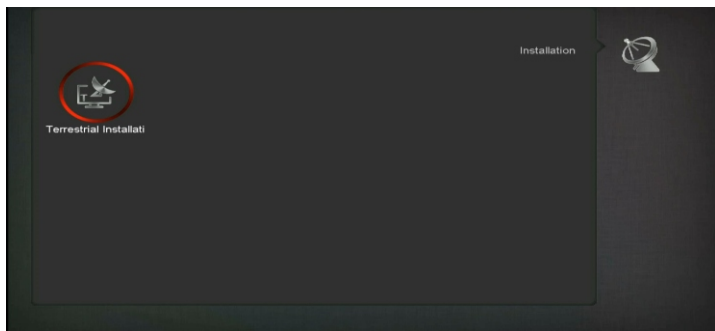


Terrestrial Installation:

 Press [OK] key to enter the selected item.

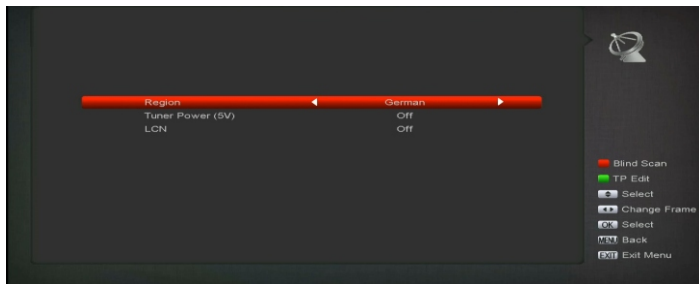

 1. You can select the Bandwidth according to different countries.
2. You can set the Tuner Power ON/OFF.
3. Press [Red] key to directly enter blind scan mode to scan the current programs.
4. Press [Green] key to enter the following menu.

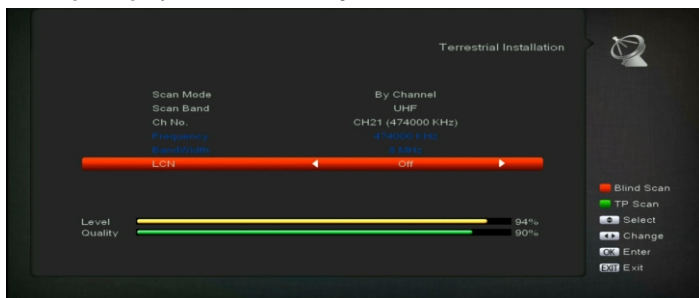

Scan Mode:

1. There are two modes. You can scan channel by channel or by frequency.
2. When scan band is UHF and region is "France", the range of Ch No. is from 21 to 69.
3. When scan band is VHF and region is "France", the range of Ch No. is from 1 to 9. (it's according to region)
4. Press [Red] key to enter blind scan menu, or press [Green] key to enter TP scan menu.
5. Press [Exit] key to exit the scanning.

**"You can download a detailed user manual from
<https://www.amikostb.com/support> "**



TROUBLE SHOOTING

No Video onTV?

How to Fix It

- ☆ Check first if the connection between the Receiver and Electric Power through the Cable or Power Supply is done properly.
- ☆ Check for lights on the front panel if the Receiver is working fine.
- ☆ Check if the connection between the Receiver and the TV via HD or RCA Cable is done properly.
- ☆ Try to connect another HD or RCA Cable.

No Signal On Channel?

How to Fix It

- ☆ Check the connection between the Receiver and Antenna Connection through Antenna Cable.
- ☆ Check if the FTA channel you have selected is currently on air.
- ☆ Check if the channel you have selected is encrypted has the corresponding access smartcard.
- ☆ Check if the Antenna Signal is correct.

No Audio or poor quality Audio?

How to Fix It

- ☆ Check if the connection between the Receiver and the TV through HD or RCA Cable is well.
- ☆ Check the volume level of your TV and Receiver.
- ☆ Check if your TV or Receiver is in Mute mode. If yes, then turn off Mute mode.

Remote control does not work?

How to Fix It

- ☆ Check if RCU batteries are inserted correctly and if they are still working
- ☆ Try to point the RCU to the right direction with no obstacles between TV and RCU IR.

NOTICE

- ☆ Specifications are subject to change without prior notice.
- ☆ The manufacturer does not take any responsibility regarding any errors or mistakes in printing.
- ☆ Please note that a new software may change the features of the receiver.
- ☆ The manufacturer holds the rights of changes without any further notice.